LexiBox®

www.mylexibox.com

User's manual

LEXIBOOK®

LBOX100EN

LBOX100ENIM1364_5Sept_V05.indd 1 05/09/2014 4:53 PM

Welcome!

Congratulations! You just bought the new LexiBox®. We invite you to read this manual to take full advantage of all the features offered by your LexiBox® as well as detailed instructions and safety tips.

The 1st Android™ educational TV console!

Place your character on the main unit and start enjoying the LexiBox® experience!

Learning, playing, reading e-books or watching your videos are only some of the numerous opportunities offered by your LexiBox®!

An interface and a universe that is fully narrated for children aged 3 years and up…..with the consent of parents!

Your LexiBox® can be updated automatically with the integrated OTA feature (“Over The Air”, live Wi-Fi update) with only a few clicks and no stress at all.

Learn, play, relax

The LexiBox® is preinstalled with applications ready to use! With your LexiBox® you will access to free digital books, games and videos already installed.

And with the Lexibox® Market application on your Lexibox®, you can download and install thousands of new applications designed for the whole family.

Note: Since the products are updated regularly, the illustrations and content of this manual are for reference only and may be different from the actual product.

LBOX100ENIM1364_5Sept_V05.indd 2 05/09/2014 4:53 PM

Table of Contents

Welcome! 2
Table of Contents 3
Equipment required 4

1. Overview 5
About your *LexiBox*® 5
Packaging Contents 8
Description of the LexiBox® 9
Lili & Enzo 12
LexiBox® Specifications 13

2. Getting Started 13
Installing the LexiBox® 13
Initial Start-Up 17
Configuring the Wi-Fi 18
Display Settings 19
Profile Settings 21
Turning Off the LexiBox® 22

3. Parental Controls 23
Launching the Parental Controls 23
What Are the Parental Controls? 23
Using the Classic Android™ Interface 26

4. The LexiBox® Universe 29
Virtual Room 29
Educational Applications 31
Educational Games 36
My Applications 40
Videos 41
Music 42
E-books 42
Use of the Virtual Keyboard 43

5. Endless Fun and Learning! 44
The LexiBox® Market 44
iStore 48
Using the External Content 49

6. Troubleshooting Guide 52

7. Important Information 55
Battery and Power Supply Information 55
Safety Instructions 57
Conformity Declaration 60

LBOX100ENIM1364_5Sept_V05.indd 3 05/09/2014 4:53 PM

Equipment required

To use your LexiBox®, you will need the following items (not included):

• 3 AAA batteries (For your wireless controller)

• Television set with HDMI port

Remark: If your television set does not have an HDMI port, you can purchase a suitable adaptor in most electronics stores. You may also purchase the HDMI100 adaptor on the Lexibook.com website.

LBOX100ENIM1364_5Sept_V05.indd 4 05/09/2014 4:53 PM

1. Overview

About your *LexiBox*®

Welcome to the LexiBox® universe, the first Android™ educational TV console! Not only does it make learning fun for your children via its educational applications, but they can also play the latest Android™ games, read e-books and watch their favourite videos directly on your living room television set!

LBOX100ENIM1364_5Sept_V05.indd 5 05/09/2014 4:53 PM

Your LexiBox® is a premium educational tool thanks to its educational activities developed by our pedagogical teams. Their objective is to foster learning amongst children aged 3 years and up by making it both fun and interactive! Several activities are offered to help your child learn about letters, numbers, the weather and the seasons. Your child can also expand his or her vocabulary via the various themes covered in the picture book, build general knowledge thanks to several quizzes, and develop his or her logical abilities.

The LexiBox® connects to a television set and also enables your child to watch his or her favourite videos (with your consent, of course!). You may download hours of cartoons on the iStore by Lexibook or watch those saved on your SD card or USB peripherals (sold separately).

Do you like music? So do we! The LexiBox® is ideal for listening to your favourite songs. In addition to the songs already included, you can listen to all your songs stored on SD cards or USB peripherals (sold separately).

LBOX100ENIM1364_5Sept_V05.indd 6 05/09/2014 4:53 PM

The LexiBox® turns your television set into a book of fairy tales for your child! Younger readers can enjoy pre-loaded e-books and interactive stories!

The LexiBox® is fun for the whole family! Each family member can have his or her own password-protected profile (up to six in total), with his or her user name and avatar.

LBOX100ENIM1364_5Sept_V05.indd 7 05/09/2014 4:53 PM

The LexiBox® ® has parental controls function to ensure safe, reasonable use. It is therefore possible to limit the use of certain applications to certain profiles, to adjust the console's settings and Wi-Fi or to access the classic Android™ interface for use by adults. As such, parents are always able to remain in control!

Packaging Contents

When unpacking, ensure that all of the following elements are included:

1 wireless controller

1 console

2 characters

1 user's manual

1 HDMI cable

1 AC adaptor

1 Hubic Cloud 100 GB gift card

1 gift card for one game to download

WARNING: Packaging materials (adhesive tape, plastic sheets, metal ties, labels, etc.) are not part of the product and must all be discarded to ensure your child`s safety.

LBOX100ENIM1364_5Sept_V05.indd 8 05/09/2014 4:53 PM

Description of the LexiBox®

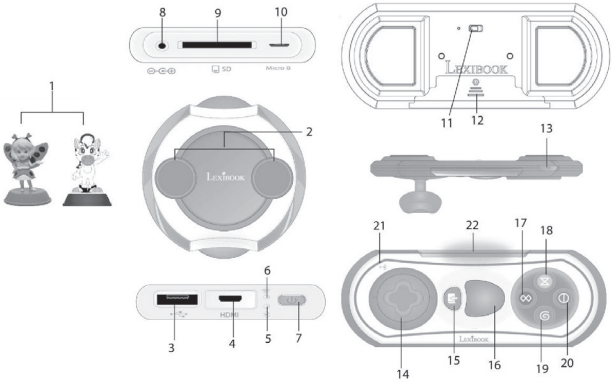

Main Unit

1. Characters (Enzo & Lili)
2. Character spaces
3. USB port
4. Mini HDMI port
5. Controller connection indicator
6. Wi-Fi indicator
7. On/Off button
8. Power supply
9. SD card port
10. Micro USB port

Controller

11. Left-hand/right-hand switch
12. Battery compartment
13. On/Off button
14. Joystick
15. Back button
16. Return button
17. button
18. button
19. button
20. button
21. Connection indicator
22. Low battery indicator

Details:

1. **Characters (Enzo & Lili):** When placed on the main unit, they appear on the screen during certain educational activities (see compatibility according to the activities).
2. **Character spaces:** For the placement of Enzo & Lili at the moment you select your character (see compatibility according to the activities).
3. **USB port:** Enables the insertion of a USB key.
4. **Mini HDMI port:** To connect the LexiBox® main unit to a television set.

LBOX100ENIM1364_5Sept_V05.indd 9 05/09/2014 4:53 PM

5. **Controller connection indicator:** Indicates the connection status of the controller(s).
6. **Wi-Fi indicator:** Indicates Wi-Fi connection status.
7. **Main unit power button:** To turn the main unit on and off.
8. **Power supply:** To connect the main unit to a power supply.
9. **SD card port:** Enables the insertion of an SD card
10. **Micro USB port:** Enables the connection of a Micro USB peripheral
11. **Left-hand/right-hand switch:** Used to set the wireless controller to left-hand or right-hand mode
12. **Battery compartment:** Open the cover to insert or change the batteries
13. **On/Off button:** Used to turn the controller on or off, as well as to remotely turn the console on or off.
14. **Joystick:** Control the movements (right, left, up and down). Pressing on it also changes the navigation mode.
15. **Back button:** Return to the previous screen
16. **Return button:** Confirm the selection
17. **button:** Cancel the selection
18. **button:** Cancel the selection
19. **button:** Confirm the selection
20. **button:** Confirm the selection
21. **Connection indicator:** Indicates the connection status between the controller and the main unit
22. **Low battery indicator:** Lights up red to indicate a low battery level

LBOX100ENIM1364_5Sept_V05.indd 10 05/09/2014 4:53 PM

To maximise the comfort of the users and to support the largest possible number of applications, your wireless controller offers 3 different modes:

To switch between modes, simply press once on the joystick (14).

	Joystick	Used to switch from one element to another, simply by using the joystick.
	Mouse	Used to move the cursor on the screen with the joystick, as if you were using a computer mouse.
	Pointer	Used to move the cursor on the screen by moving the controller!

REMARK: Certain applications included are only compatible with only 1 of the 3 modes (more details later in this user's manual). For the applications downloaded from the LexiBox® Market, do not hesitate to test the three modes to ensure that you choose the one most suitable.

LBOX100ENIM1364_5Sept_V05.indd 11 05/09/2014 4:53 PM

Lili & Enzo

Spirited & beautiful, Lili is always ready to embark on an adventure! Let her be your guide and she will become your best friend!

Enzo never stops being both curious and funny. He sure has a "nose" for educational adventures!

Lili and Enzo can interact with your LexiBox® ® via RFID technology. Place one of the characters on the main unit to discover educational activities with him or her!

See the "Educational Applications" section for more details.

REMARK: In terms of game play or results, the Lili and Enzo characters otherwise have no effect.

LBOX100ENIM1364_5Sept_V05.indd 12 05/09/2014 4:53 PM

LexiBox® Specifications

Operating system	Google Android™ 4.2
Processor	1GHz dual core
Memory	108 GB of memory: 8 GB of internal memory + 100 GB on Lexibook® Cloud by Hubic® offered free for 1 year +32 GB via Mini SD card (sold separately)
RAM	1 GB
Wi-Fi	802.11 b/g/n (built-in)
Connectors	1 mini USB port 2.0, 1 SD card slot, 1 USB port, 1 AC jack and 1 HDMI port
Compatible image formats	JPEG, BMP, PNG, GIF
Compatible audio formats	MP3/ WAV/M4A / FLAC/ MID/OGG
Compatible video formats	MKV /MP4 /MPG/3GP /ASF /FLV
Compatible text formats	PDF / TXT
EPUB readable formats	PDF/EPUB
Weight	Main unit - 254 g, Controller - 158 g
Languages	EN / FR / ES / DE / IT

2. Getting Started

Installing the LexiBox®

Once you have unpacked the LexiBox® ®, you must connect it to your television set and configure the wireless controller. Take note: installation must be done by an adult.

A. Installing the LexiBox® Main Unit

1. Turn off your television set.
2. Plug one end of the HDMI cable into the mini HDMI port (4) located in front of the main unit, and then connect the other end to your television set's HDMI port.

LBOX100ENIM1364_5Sept_V05.indd 13 05/09/2014 4:53 PM

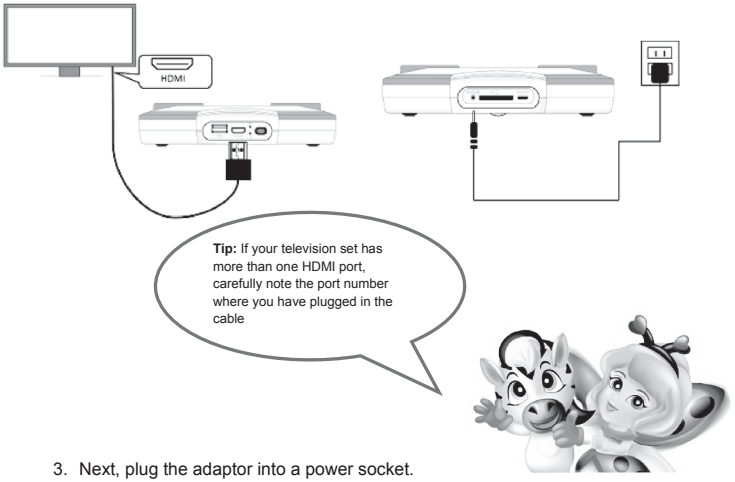
HDMI
Tip: If your television set has more than one HDMI port, carefully note the port number where you have plugged in the cable

3. Next, plug the adaptor into a power socket.
4. Insert the AC/DC adaptor plug into the device's power supply (8)
5. Turn on your television set and select the HDMI input in question.
6. The LexiBox® ® will automatically start up once the adaptor is plugged in.

B. Installing the Wireless Controller

Inserting batteries in the controller:

1. Using a screwdriver, open the battery compartment located under the device.

2. Insert 3 AAA batteries, in accordance with the polarities indicated inside the battery compartment and in accordance with the diagram below.

3. Put the cover back in place and retighten the screw.

LBOX100ENIM1364_5Sept_V05.indd 14 05/09/2014 4:53 PM

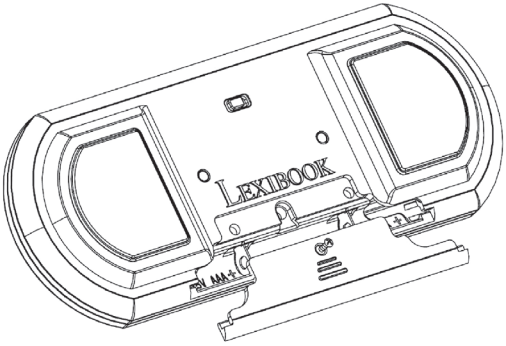

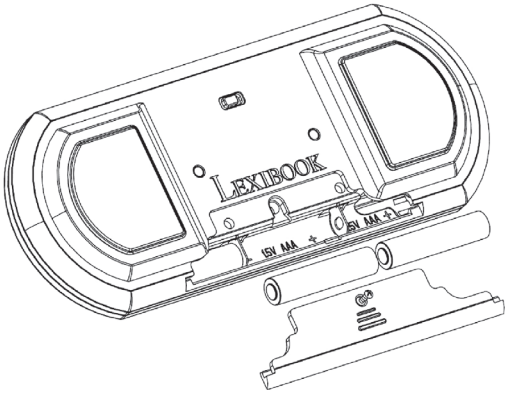

LBOX100ENIM1364_5Sept_V05.indd 15 05/09/2014 4:53 PM

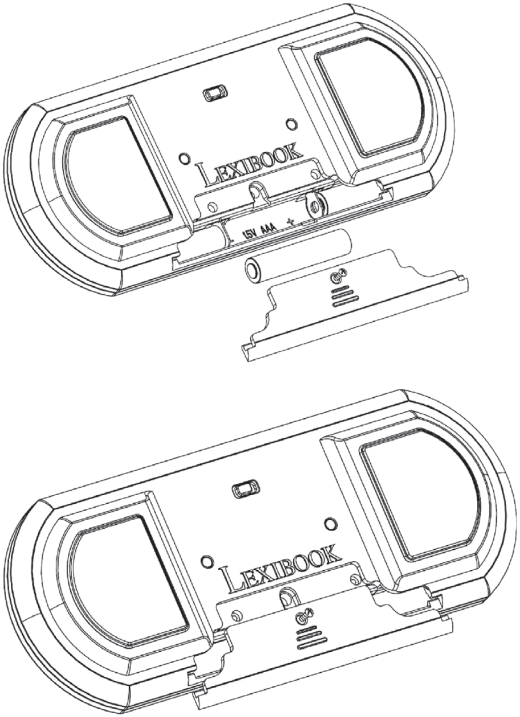

Connecting the controller:

1. Activate the left-hand or right-hand mode using the left-hand/right-hand switch (11).
2. Ensure that the television set and the LexiBox® are turned on.

LBOX100ENIM1364_5Sept_V05.indd 16 05/09/2014 4:53 PM

3. Follow the instructions on the screen. Press the controller power button (13) for 4 seconds. The connection indicator (21) will start to blink.
4. Once the controller is connected to the main unit, the connection indicator will stop blinking and will stay lit.

Remark: Once you have first successfully connected your controller to the main unit, you will now simply have to press the controller power button to use the LexiBox® ® again.

Remark: When the red LED indicator is lit, the batteries must be changed. Should a problem occur, please consult section "6. Troubleshooting Guide".

Initial Start-Up

1. Ensure that the wireless controller is connected to the LexiBox® main unit.
2. The language selection page is displayed.
3. Move the joystick (14) to the left or right to select the desired language and press the ⏻ button (20) to confirm your selection.

Remark: This screen appears only during the initial start-up, but you can change the language at any time in the settings.

4. Pay close attention to the help video, as it contains lots of useful information!
5. After the introductory video, you will go to the profile selection screen.

   It is recommended to first go to the parental controls to define a parental password. (The default password is 123456).

LBOX100ENIM1364_5Sept_V05.indd 17 05/09/2014 4:53 PM

Configuring the Wi-Fi

If you wish to do so, you may activate the Wi-Fi connection (OFF→ON), and then select an available Wi-Fi network.

LBOX100ENIM1364_5Sept_V05.indd 18 05/09/2014 4:53 PM

If you wish to do so, you may activate the Wi-Fi connection (OFF→ON), and then select an available Wi-Fi network.

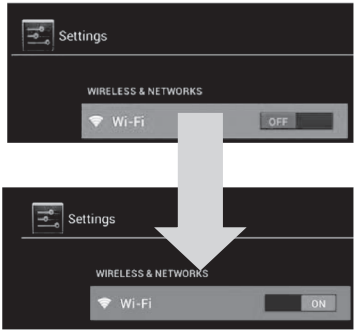

6. Press the Back button (15) to return to the parental controls menu.
7. To deactivate the Wi-Fi connection, change the Wi-Fi mode from ON to OFF.

Remark: The Wi-Fi connection is only necessary to download other applications from the LexiBox® Market and iStore, and for the Lexibook Protect browser.

Display Settings

If the LexiBox®'s screen is not adapted to the screen format of your television set, you may adjust it manually, either by using your television set's settings (in which case you must refer to the user's manual of your television set), or by using the LexiBox®'s settings.

1) Go to "Parental Controls"
2) Select “Settings” and then “System Settings”
3) Select “Screen” and then “Screen Format”

LBOX100ENIM1364_5Sept_V05.indd 19 05/09/2014 4:53 PM

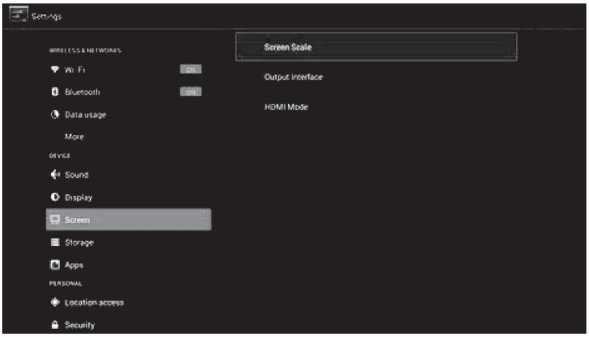

4) Use the joystick (14) to move the cursor and align the side of the screen with that of the television set, and then press once on "OK" to confirm.

5) Once the screen is adjusted, press the Back button (15) to return to the parental controls.

LBOX100ENIM1364_5Sept_V05.indd 20 05/09/2014 4:53 PM

Profile Settings

There are six profiles available and one section of parental controls in your LexiBox®. Each child may therefore create his or her profile and even protect it with a password. It is also possible for the parents to allocate different applications to each child, according to their age.

1. Initially, six empty profiles are displayed on the profile selection screen.
2. The user chooses his or her profile and personalises it.

Remark: Once you have activated the password, you must use the same password each time to go to the profile. Each profile may have a different password. A lost password may be recovered via the parental controls.

3. Welcome to the fascinating LexiBox® virtual world!

LBOX100ENIM1364_5Sept_V05.indd 21 05/09/2014 4:53 PM

4. Press the Back button (15) to return to the profile selection menu.

Turning Off the LexiBox®

There are two ways to turn off the LexiBox®.

With the controller

1. Press the wireless controller power button (13) for 4 to 5 seconds.
2. Confirm your selection in the window that is displayed.

Via the main unit

Press the main unit power button (7) for a few seconds, until the main unit turns off.

LBOX100ENIM1364_5Sept_V05.indd 22 05/09/2014 4:53 PM

3. Parental Controls

Launching the Parental Controls

The Parental Controls menu is accessible from the profile selection screen or from the Virtual room.

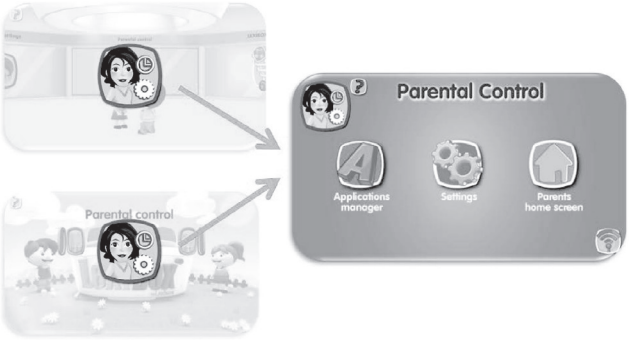

Remark: When you first go to the parental controls, enter the default password "123456". If you change the password, make every effort to remember it.

What Are the Parental Controls?

The parental controls enable parents to manage the LexiBox® settings in order to guarantee safe usage.

The parental controls include three functions:

Icons	Function
	Use the **Applications Manager** to manage and classify the applications suitable for each of the children represented by his or her profile. Using the joystick (14), you may place the application in the various categories: educational applications, educational games or My Applications. If you select the star, the application in question will be considered a "favourite" and will appear in the upper left-hand section of the selected categories.

LBOX100ENIM1364_5Sept_V05.indd 23 05/09/2014 4:53 PM

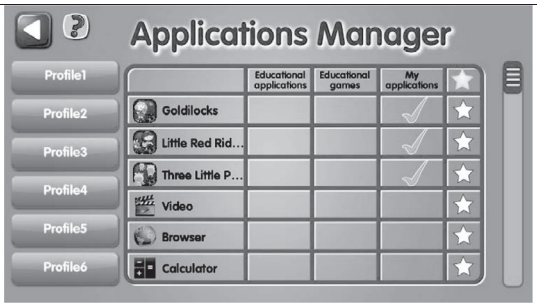

Remark: If your child downloads an application from the LexiBox® Market, it will remain unavailable until you have authorised its use via the Applications Manager

Use the **Settings** to manage the administrator functions. You may delete a profile, change the parental password, delete the profile passwords, connect a second controller and go to the system settings. Do not forget to press the green button in the upper right of the page to save the modifications.

1. **Profile Manager**

   Use this function to manage the profiles. At the start, all users are authorised to create and modify their profile. You may deactivate this ability here.

   You may also delete a profile in this section. Use your joystick (14) to select the profile that you wish to delete and press the Return button (16). A window will appear. The selected profile will be deleted after your confirmation.

LBOX100ENIM1364_5Sept_V05.indd 24 05/09/2014 4:53 PM

2. **Parental password**

   Use this function to change your password or to reset the default password (123456). Enter the password by using the number pad that appears on the screen.

3. **Profile Password Manager**

   Use this function to reset the password for each profile. Use your controller (14) to choose the profile and press the Return button (16). The number pad will appear in order to reset the profile password.

4. **Remote Controllers**

   Enables the connection of a second controller. Move the joystick of the first controller (14) to the right and press the Return button

LBOX100ENIM1364_5Sept_V05.indd 25 05/09/2014 4:53 PM

(16) to activate the pairing. At the same time, press the 2nd wireless controller power button (13) for 3 to 4 seconds. The connection indicator (21) will blink until the pairing is complete (the connection indicator will then remain lit without blinking).

5. **System Settings**

Use this function to access all Android™ settings.

Use the **Parental Home Screen** to go to the applications or to any other digital content with the classic Android interface. Please refer to the following paragraph for more details concerning the classic Android interface and how to return to the interface LexiBox® ®.

Using the Classic Android™ Interface

The LexiBox® may also be used by adults who enjoy the classic Android interface! Parents can easily access this interface from the parental controls. Simply click the "Parental Home Page" icon .

LBOX100ENIM1364_5Sept_V05.indd 26 05/09/2014 4:53 PM

From the LexiBox® interface to the classic Android interface

LBOX100ENIM1364_5Sept_V05.indd 27 05/09/2014 4:53 PM

From the classic Android interface to the LexiBox® interface

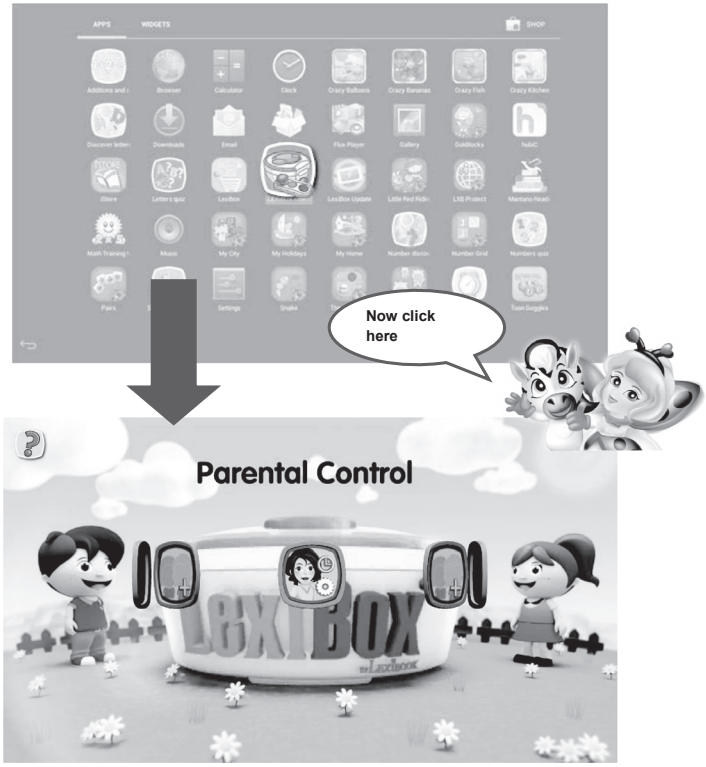

Remark: The interface change may take 2 to 5 seconds, please wait.

LBOX100ENIM1364_5Sept_V05.indd 28 05/09/2014 4:53 PM

4. The LexiBox® Universe

Virtual Room

After having chosen his or her profile, your child will enter the virtual room. He or she can use the joystick (14) to navigate between the various categories.

In the virtual room, 10 categories are provided:

	LexiBox® Market On this download platform, you will find a multitude of applications to install on the LexiBox ®: educational games, puzzles, action games… and much more! Each application is carefully selected by Lexibook® to avoid any unsuitable content. For more information, see the "The LexiBox® Market" section.
	Educational Applications Here you will find the LexiBox®'s exclusive educational activities! Learn numbers, letters and the seasons with Enzo & Lili! **Remark:** Parents can add additional applications here from the "Applications Manager".

LBOX100ENIM1364_5Sept_V05.indd 29 05/09/2014 4:53 PM

	Educational Games This category consolidates a selection of games for even more fun and opportunities to develop your logical abilities and dexterity. **Remark:** Parents can add additional applications here from the "Applications Manager".
	My Videos LexiBox® is also a true multimedia centre! Here the files will appear under formats MKV / MP4 / MPG / 3GP / ASF / FLV.
	My Music Do you feel like listening to some music? In this section, audio files will appear under formats MP3/ WAV/ M4A / FLAC/ MID/ OGG. Songs by the Twin Sisters™ are already pre-loaded on the LexiBox® !
	My Ebooks To view your digital books: formats PDF / EPUB. Twin Sisters™ e-books are already pre-loaded on the LexiBox® !
	My Applications This category already contains some useful applications and may be the ideal folder to use for categorising other applications. **Remark**: Parents may add additional applications here from the "Applications Manager".
	My USB key / SD card Insert a USB key or an SD card in the suitable port/slot, and then enter this section to navigate the included multimedia content. **Remark:** Only the content in the compatible formats indicated above may be read on the LexiBox®.
	My Profile Children may update their profile information here.
	Parental Control The parental controls are also available from the virtual room and provide control of the applications, profiles and settings, as well as access to the classic Android interface.

LBOX100ENIM1364_5Sept_V05.indd 30 05/09/2014 4:53 PM

Educational Applications

Several educational activities applications are already installed on the LexiBox®.

For certain specific activities, Enzo and Lili can accompany you!

A. Select Lili or Enzo for some applications

Some educational applications are designed to be played with the character that the child has chosen. He or she may choose to use either Lili or Enzo by placing the character on the corresponding space (2) before launching the applications.

1. **Place a character (1) on the main unit.**

2. **Launch one of the applications compatible with the characters (see the compatible applications in the following section, accompanied by the "Enzo & Lili" icon)**

LBOX100ENIM1364_5Sept_V05.indd 31 05/09/2014 4:53 PM

3. **Once the character selection page is displayed, here is what appears if:**

a) You place Lili /Enzo on the left-hand space

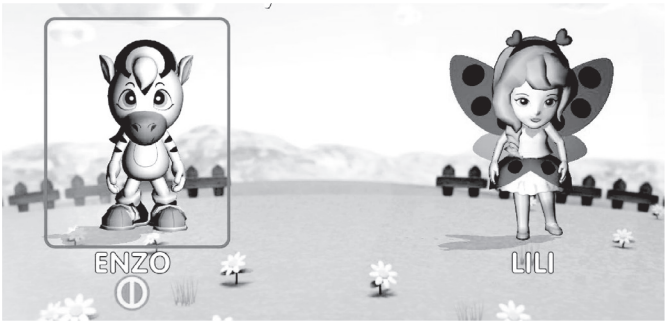

b) You place Lili /Enzo on the right-hand space

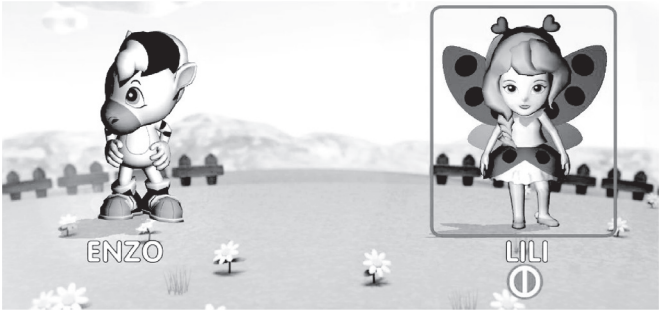

LBOX100ENIM1364_5Sept_V05.indd 32 05/09/2014 4:53 PM

B. The Applications

Discover Letters

Look! A field full of letter-shaped hedges to explore! Move your character around the screen. When you select a hedge, it lights up, and then the picture of an animal appears and a voice reads the word. It is a fun way to learn the different letters and animals that start with them.

Play in joystick mode

Learning theme(s):

- Letters
- Animals

Letters Quiz

Djiba the Elephant is trying to learn the spellings of words for objects, but he needs your help! Select the picture that matches the word that you are hearing! This quiz is an excellent way to learn how to match pictures with words!

Play in joystick mode

Learning theme(s):

- Letters
- Spelling

Word Builder

Enzo and Lili are on vacation on a desert island and have brought along their favourite word game to pass the time. Observe the letters in the incomplete words (formed of 3 to 6 letters), and find the missing letter to complete the word.

Play in joystick mode

Learning theme(s):

- Letters
- Spelling

Number Discovery

Number-shaped hedges have sprouted in a field! Press the hedges to light them up, and the matching number of vegetables or fruits appears on the screen. A voice reads the numbers and the type of fruit or vegetable. It is an excellent introduction to the concept of quantity!

LBOX100ENIM1364_5Sept_V05.indd 33 05/09/2014 4:53 PM

Play in joystick mode

Learning theme(s):

- Numbers
- Fruits & vegetables

Numbers Quiz

Djiba is trying to learn how to count objects, but he needs your help! Find the correct answer to questions such as "Which plate contains 3 vegetables?" by placing your character on the correct answer. A voice reads the answer aloud.

Play in joystick mode

Learning theme(s):

- Numbers
- Counting

Additions and Subtractions

Obtain the best bowling score possible by adding and subtracting! Select the correct answer to the addition or subtraction and bowl a strike! If you select a wrong answer, the ball will end up in the gutter. Listen to the voice for each operation. Learning math as you bowl is so much fun!

Play in joystick mode

Learning theme(s):

- Numbers
- Addition
- Subtraction

Weather Discovery

Discover various meteorological phenomena by matching the animations to the weather event.

Play in joystick mode

Learning theme(s):

- Weather
- Nature

Seasons Discovery

Discover how the year is divided into seasons. Questions are read aloud and accompanied by illustrations. Answer questions such as "When do birds fly south?" by

LBOX100ENIM1364_5Sept_V05.indd 34 05/09/2014 4:53 PM

	choosing the correct season, and then move on the next question. **Play in joystick mode** **Learning theme(s):** • Seasons • Directions
	Time of the Day Can you match each activity with a particular time of day? Listen carefully to the voice as it reads out options for the activities that match a certain time of the day, from morning until night. For example, at 5:30 p.m., is it time to "eat a snack ", "help to set the table", "eat breakfast" or "take the bus to go to school"? **Play in joystick mode** **Learning theme(s):** • Time of the day • Everyday activities
	My Home To deepen children's understanding of the familiar universe of the home environment! The Discovery mode enables users to learn new vocabulary as they play. Use the Quiz mode to test knowledge acquired! **Navigate in mouse mode** **Learning theme(s):** • Household objects • Vocabulary
	My City Discover the city from your living room! The Discovery mode enables users to learn new vocabulary as they play. Use the Quiz mode to test knowledge acquired! **Navigate in mouse mode** **Learning theme(s):** • Transportation • Jobs and professions • School
	My Holidays Take a break from the everyday! The Discovery mode enables users to learn new vocabulary as they play. Use the Quiz mode to test knowledge acquired! **Navigate in mouse mode** **Learning theme(s):** • Musical instruments

LBOX100ENIM1364_5Sept_V05.indd 35 05/09/2014 4:53 PM

- Sports
- Drawing

Additional chapters available for download from the LexiBox® Market!

My Picture Book – Hobbies

Perfect for discovering new interests! The Discovery mode enables users to learn new vocabulary as they play. Use the Quiz mode to test knowledge acquired!

Navigate in mouse mode

Learning theme(s):

- Mountain
- Nature
- Beach

My Quiz Picture Book

For picture book champions! Use this exciting questionnaire to test your knowledge of everyday vocabulary.

Navigate in mouse mode

Learning theme(s):

- Home
- City
- Hobbies
- Vacation

Additional application available for download from the LexiBox® Market!

Quiz Race

A race that is as zany as it is fast-paced! The goal of the game is to succeed in finding all of the correct answers to the questions in order to reach the finish line.

To download this game, please refer to the details on the gift card.

Play in joystick mode

Learning theme(s):

- Numbers
- Letters
- Objects

Educational Games

A variety of pre-loaded games to vary game play experiences and develop logical skills and dexterity!

LBOX100ENIM1364_5Sept_V05.indd 36 05/09/2014 4:53 PM

Crazy Balloons

Up, up and away! Hold on to your crazy balloon to soar through the air and collect the golden stars, while avoiding obstacles such as planes, ninjas and even floating cows on the attack. Ensure that you always stay above the water. Along the way, collect power-ups, shields and speed-ups to help you reach the end of the course before time elapses!

Play in joystick mode

Crazy Bananas

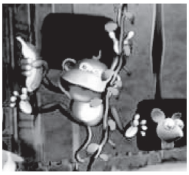

Do not let the monkey grab the banana! He will repeatedly swing across on a vine to try to grab a banana from the left of the screen. Move the water sprinkler from left to right to splash him off!

Play in joystick mode

Crazy Fish

LBOX100ENIM1364_5Sept_V05.indd 37 05/09/2014 4:53 PM

There are plenty of fish in the sea -- just make sure you do not try to eat any that are bigger than you are! It is nonetheless safe to eat smaller fish and collect items such as pearls, clocks and bubbles with in-game advantages along the way, but avoid the big fish, since they can eat you!

Play in joystick mode

Crazy Kitchen

In this world, hamburger ingredients fall from the sky. You must move the train left and right to catch them and to try to assemble the hamburger displayed in the upper right-hand part of the screen. Any incorrect ingredients will fall off the train. Hurry to finish before time elapses!

Play in joystick mode

Math Training

A fun learning game to practice addition, subtraction, division and multiplication.

Play in mouse mode or pointer mode.

LBOX100ENIM1364_5Sept_V05.indd 38 05/09/2014 4:53 PM

Turbo Fly HD Demo

A very fast game where you must pilot your ship to win the race.

Note: This is a demo version and therefore not all of the tracks and ships are available.

Play in mouse mode or pointer mode.

Snake

Help the snake to grow by making it eat cherries. Be careful not to bite your own tail or hit any obstacles!

Play in joystick mode

Pairs

This educational game is designed to entertain children while developing their memory. The aim of the game is find all of the hidden pairs as quickly as possible.

Play in joystick mode

Number Grid

The aim of the game is to build a numbered grid using all of the numbers indicated, from lowest to highest.

Play in joystick mode

Labyrinth

In this labyrinth game, you must move a steel ball by tilting the controller. Avoid all of the obstacles on the path to the finish line!

Play in pointer mode

LBOX100ENIM1364_5Sept_V05.indd 39 05/09/2014 4:53 PM

My Applications

Several applications are already installed on the LexiBox®. In this section, you can easily launch your favourite applications.

	hubiC Use this application to store data (up to 100 GB) in a fully secure space. You may decide how and with whom to share the files. 100 GB offered free for 1 year! See details on the gift card.
	Lexibook® Protect Secure Internet browser that blocks malicious sites. Parents may also block or authorise the websites of their choice. **Remark:** This application is not visible by default. In order for children to use it, they must be authorised to do so via the "Applications Manager".
	iStore by Lexibook A user-friendly online store where users can find additional multimedia educational content: e-books and cartoons.
	Toon Goggles™ A video portal for kids to watch cartoons they want!
	Goldilocks A super interactive book to discover the adventures of Goldilocks in the forest. **Navigate in mouse mode**
	Little Red Riding Hood A super interactive book to discover the story of Little Red Riding Hood. **Navigate in mouse mode**

LBOX100ENIM1364_5Sept_V05.indd 40 05/09/2014 4:53 PM

	The Three Little Pigs A super interactive book to discover the story of the Three Little Pigs. **Navigate in mouse mode**

Please note that Lexibook® strongly recommends that parents supervise their children when they are on the Internet. The Internet is a constantly changing environment containing several billion websites. There is therefore always a risk that some inappropriate sites and content will not be properly filtered. The Lexibook® Protect browser does not replace adult supervision and assistance when using the Internet.

Videos

It is possible to watch your favourite videos on the LexiBox®, and transform your living room into a veritable movie theatre!

This app is compatible with the following file formats: MKV / MP4 / MPG /3GP / ASF / FLV.

Click one of the icons to start playback.

Remark: To transfer your video files into the LexiBox and make these visible on "My Videos" category, you need to use the Explorer app. The Explorer is only visible in the classic Android interface (Parents home screen). From the Explorer, make sure you put your multimedia files into the folder LBOX100/ALL.

LBOX100ENIM1364_5Sept_V05.indd 41 05/09/2014 4:53 PM

Music

In this section, you may listen to all your favourite songs! Click one of the icons to start playback.

This app is compatible with the following audio file formats: MP3 / WAV/ M4A/ /FLAC/ MID/ OGG.

Exclusive! 10 Twin Sisters™ songs are also included!

Remark: To transfer your music files into the LexiBox and make these visible on "My Music" category, you need to use the Explorer app. The Explorer is only visible in the classic Android interface (Parents home screen). From the Explorer, make sure you put your multimedia files into the folder LBOX100/ALL.

E-books

Use this app to view your digital books with the following formats: PDF / EPUB.

Click one of the icons to open the document.

LBOX100ENIM1364_5Sept_V05.indd 42 05/09/2014 4:53 PM

Exclusive! 10 Twin Sisters™ educational e-books are also included!

Remark: To transfer your ebook files into the LexiBox and make these visible on "My Ebooks" category, you need to use the Explorer app. The Explorer is only visible in the classic Android interface (Parents home screen). From the Explorer, make sure you put your multimedia files into the folder LBOX100/ALL.

Use of the Virtual Keyboard

The LexiBox® is equipped with a virtual keyboard that appears as needed.

• **Keyboard display**

1. The keyboard on the screen appears when you click on any part of the text field.
   Remark: The "text field" is found in the space where you would like to enter text, i.e. a search bar or form.
2. The virtual keyboard is displayed on the bottom of the screen.

3. Type your text using the virtual keyboard.
4. Press the key on the keyboard to launch the search.
5. Press the key anywhere outside of the keyboard to hide it.

• Typing numbers

LBOX100ENIM1364_5Sept_V05.indd 43 05/09/2014 4:53 PM

To enter numbers, use the NUMBER ?123 keys to display the number pad on the virtual keyboard.

5. Endless Fun and Learning!

The LexiBox® Market

On the LexiBox® Market, you will find the latest Android™ games and premium educational applications. Create your account and you may download hours worth of additional games and learning activities!

All applications are carefully selected by Lexibook ® to avoid any content that is not suitable for children aged 3 years and up.

Remark: The applications may be free of charge or paid.

Remark: Lexibook ® cannot guarantee the content or the services accessible via the LexiBox® . Moreover, Lexibook ® shall not be held liable for any loss of data, damages or modification to the unit related to the download or the update of the applications or software on the LexiBox®. Furthermore, Lexibook® shall not be held liable for any expense, cost or financial loss resulting from purchases made on the Internet from the LexiBox®.

Important:

Ask for your parents' help and permission BEFORE purchasing and downloading paid applications on your LexiBox®.

Lexibook ® shall not be held liable for any expense, cost or financial loss, in any form whatsoever, resulting from a purchase made on the Internet from the LexiBox® .

LBOX100ENIM1364_5Sept_V05.indd 44 05/09/2014 4:53 PM

A. Creation of a LexiBox® Market Account

1. In the virtual room, select the LexiBox® Market category.

2. After having carefully read the terms of use, accept them to continue. Next, click the "Registration" button

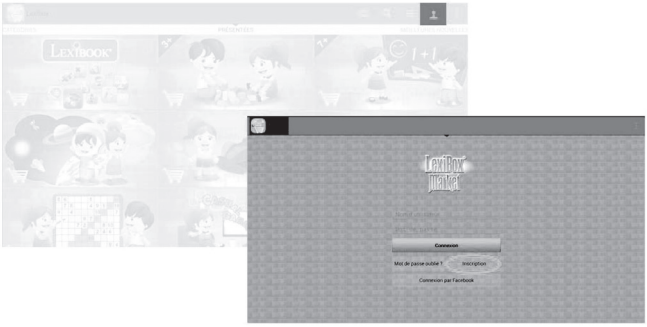

3. Enter all of the information in the required fields.

LBOX100ENIM1364_5Sept_V05.indd 45 05/09/2014 4:53 PM

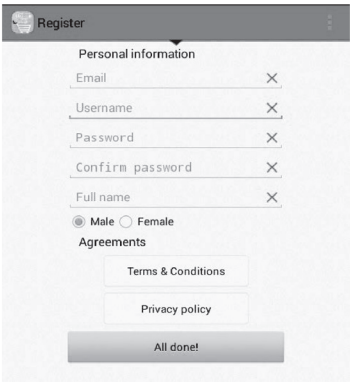

4. Once all of the information is entered in the fields, press "Done!".

B. Installing an Application onto the LexiBox®

1. In the LexiBox® Market, select the application that you wish to download.

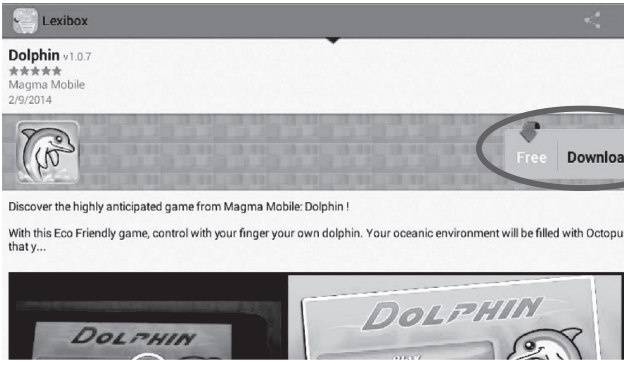

2. Please wait while your application downloads.

LBOX100ENIM1364_5Sept_V05.indd 46 05/09/2014 4:53 PM

3. Next, press "Install" to launch the installation.

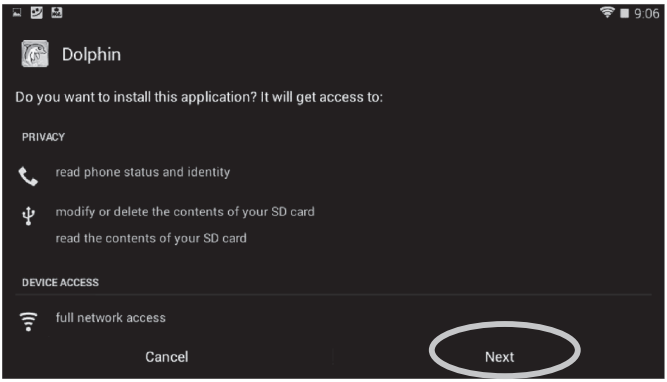

4. Once the installation window indicates the process is done, go to the "Parental Controls", in the "Applications Manager" and authorise the application for the desired profiles by placing it in the desired category(ies). The application will not be seen by the child until the parents complete this step.

LBOX100ENIM1364_5Sept_V05.indd 47 05/09/2014 4:53 PM

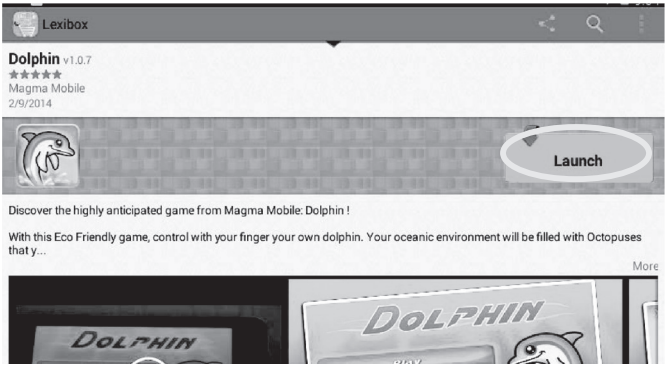
Lexibox
Dolphin v1.0.7
Magma Mobile
2/9/2014
Launch
Discover the highly anticipated game from Magma Mobile: Dolphin !
With this Eco Friendly game, control with your finger your own dolphin. Your oceanic environment will be filled with Octopuses that y...
More
DOLPHIN
DOLPHIN

Remark: Do not exit the LexiBox® Market before the download of an application is complete. Should this occur, return to the LexiBox® Market and make sure to click "Install" once the download is complete.

C. Purchasing an Application

1. Log in to your account. Next, follow the steps described in the section above.
2. On the page of the application that you wish to purchase, click "**Download**".
3. After having verified the price of the application, click "**Purchase**".
4. Next, follow the instructions step by step to make payment.

Remark: Lexibook ® is constantly improving its products. To obtain the latest version of the LexiBox® ® Market and to download the latest updates, please go to the following link: http://www.myLexiBox®.com/

This link is also directly accessible via the "LXB Update" shortcut, located on your LexiBox® ®'s home page. Help us to improve the LexiBox® Market! Don't hesitate to contact Lexibook®'s customer service department if you find inappropriate applications.

iStore

LBOX100ENIM1364_5Sept_V05.indd 48 05/09/2014 4:53 PM

Download your child's favourite cartoons and e-books from the iStore!

The iStore offers a selection of popular cartoons for children. You may download a series of episodes or rent it for 24 to 48 hours. Digital books and stories will soon be available!

A. How to Find a Cartoon

- Under "Sort", click the drop-down list and select the display mode for our video catalogue.

- Under "Search", indicate the name of the series and then click "Search".

B. How to Rent or Download a Video

Once you have selected a video by clicking its image, select the desired licence option and click "Add to basket". For your first purchase, simply enter your e-mail address and select "I am a new client" prior to connecting, and then follow the payment procedure described on the screen.

C. How to Watch the Rented or Downloaded Video

Use "FluxPlayer" to play rented and downloaded videos.

Using the External Content

A. Using an SD Memory Card

To read additional files or to have additional storage space on your LexiBox® , you may purchase an SD card (sold separately) and insert it in the LexiBox®.

Warning: Once the files on a memory card are erased, you can no longer recover them. Make a back-up copy before erasing them.

• **Memory card compatibility**

The device is compatible with SD cards containing up to 64 GB.

• **Insertion of a memory card**

LBOX100ENIM1364_5Sept_V05.indd 49 05/09/2014 4:53 PM

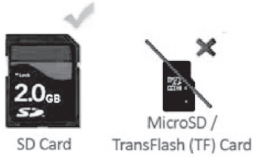

5. Insert an SD memory card in the SD card slot (9) located in back of your LexiBox® ®.

   Ensure that that the card's metallic connectors are pointing downward when the front of the LexiBox® ® is facing you.

6. Gently insert the card in the reader until it clicks into place.

• Removing the Memory Card

Remark: BEFORE removing the memory card, you must always disable it.

1. In the "System Settings" menu, accessible in the parental controls, select "Storage" and then click "**Disable the SD card"**.

LBOX100ENIM1364_5Sept_V05.indd 50 05/09/2014 4:53 PM

2. Press “**OK**” to confirm and wait until the memory card is deactivated.

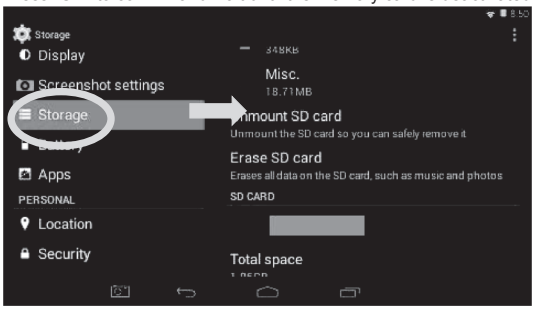

3. You may now remove the card: press lightly on the card until you hear a click, and the card will be ready for removal. Gently remove it from the card slot.

Remarks: Never remove the memory card without first having disabled it.

Never remove the memory card while the LexiBox® ® is reading or writing to the card. This could lead to a loss of data and/or damage the card.

• **Formatting the memory card**

1. In the "System Settings" menu, select "**Storage**" and then click "**Format the SD card**"
2. Confirm by clicking "**Format the SD card" and then "Format entire card**".

Warning: "Format the SD card" will **permanently** erase the content of the SD card.

B. Inserting a USB Peripheral

The LexiBox® ®'s USB port will enable you to connect a hard disk or another USB peripheral. You may therefore access any multimedia files stored on these peripherals.

LBOX100ENIM1364_5Sept_V05.indd 51 05/09/2014 4:53 PM

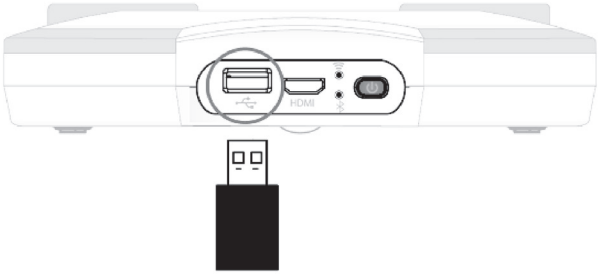

WARNING: Before connecting the USB cable to the LexiBox® ®, ensure that you have the help of an adult. Do not apply undue force to the connection plug, as you risk damaging the Mini USB plug, which is very fragile.

Remarks intended for parents:
Please ensure that the plug is connected on the correct side to prevent the breakage of the end of the LexiBox® ®'s USB cable or USB port.

6. Troubleshooting Guide

Problem	Solution
The main unit does not turn on	Check your adaptor and ensure that it is properly connected to the power outlet. Press the power button (7) long enough to turn on the unit.
The size of the image does not correspond to that of my	1) Go to the parental controls home page. 2) Select "Settings" and then "System

LBOX100ENIM1364_5Sept_V05.indd 52 05/09/2014 4:53 PM

television set screen	Settings" 3) Select “Screen” 4) Select “Screen size”
Nothing appears on my TV set	Check whether the HDMI cable is properly connected to both the LexiBox® and your television set. Check the input source of the television set and ensure that you have selected the input source that corresponds to the HDMI port when connecting the television set.
The image is displayed but there is no sound	Check the input source of the television set and ensure that you have selected the input source that corresponds to the HDMI port when connecting the television set. Check the volume in the system settings and ensure that the audio output is not disabled.
Impossible to connect to Wi-Fi	Check your home Wi-Fi connection and enter the correct password.
I have forgotten the parental controls password	Please enter the super password “612749” to access your account.
Impossible to access the LexiBox® Market	1) Go to the parental controls home page. 2) Check whether the Wi-Fi connection is activated and connected to a stable network. If Wi-Fi is connected, please check the status of your account.
Impossible to open the files saved on my USB key / SD card	Check whether the format of the files is compatible with the LexiBox®.
The wireless controller does not turn on	Check if the batteries are used and ensure that the 3 batteries are fully charged and correctly inserted according to the diagram. Press the wireless controller power button (13) to turn it on.
The wireless controller does not pair with the unit	Please check whether the controller batteries are used.

LBOX100ENIM1364_5Sept_V05.indd 53 05/09/2014 4:53 PM

pair with the unit	batteries are used. If the batteries are charged and correctly inserted, please connect a mouse via USB port (3) to your LexiBox®: 1) Go to the “Bluetooth” section in the Settings. 2) Ensure that “Bluetooth” is activated. Turn it back on if this is already the case. 3) Also try to disconnect already connected peripherals. 4) Switch off and then restart the main unit if it is still not working properly.

LBOX100ENIM1364_5Sept_V05.indd 54 05/09/2014 4:53 PM

7. Important Information

Battery and Power Supply Information

The main unit of your LexiBox® is powered by 1 AC adaptor (5V , 2A ,

 , centre positive)

Output: 100 - 240V ~ 50/60Hz, 0.4A

The wireless controller runs on 3 x 1.5V ⎓ AAA/LR03 batteries (sold separately)

To connect the main unit to a DC jack:

1. Ensure that the main unit is switched off.
2. Insert the provided AC adaptor into the LexiBox®'s mains jack.
3. Insert the other end into a power socket.
4. Switch on the main unit.

Do not recharge non-rechargeable batteries. Remove the batteries from the game before recharging them. Only charge batteries under adult supervision. Do not mix different battery types, or new and used batteries. The batteries must be inserted in accordance with the proper polarities. Used batteries must be removed from the toy. The battery terminals must not be short-circuited. Do not dispose of batteries by burning them. Remove the batteries in the case of an extended period of non-use.

Warning: When not in use for an extended period, unplug the adaptor in order to prevent overheating. When the game is powered by an adaptor, do not play outdoors. Regularly check the condition of the adaptor and connection wires. Should damage occur, do not use the adaptor until it is repaired or replaced. The toy must only be used with the transformer intended for the toy. The adaptor is not a toy. If liquids are used for cleaning, the console must be unplugged from the power supply during cleaning. This toy is not intended for children younger than 3 years old. Improper use of the adaptor may cause electrocution.

The toy must only be connected to Class II equipment bearing the following symbol.

LBOX100ENIM1364_5Sept_V05.indd 55 05/09/2014 4:54 PM

WARNING: Significant electromagnetic interference or electrostatic discharges may cause malfunction or data loss. If the device is not working properly, reset the unit or unplug the AC adaptor from the power socket, and then reconnect it.

Safety Measures

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The graphic symbols on the back of the product mean the following:

DANGEROUS VOLTAGE:
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" inside the device, which constitutes a risk of electric shock.

WARNING:
The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions accompanying the product.

WARNING:

• To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.

• The device must not be exposed to dripping or splashing, and no object filled with liquids, such as vases, shall be placed on the device.

• The mains plug is used as the disconnection system and must always be readily operable.

• In order to completely disconnect the device from the mains, the mains plug must be unplugged from the mains socket outlet.

LBOX100ENIM1364_5Sept_V05.indd 56 05/09/2014 4:54 PM

Safety Instructions

WARNING: THIS PRODUCT IS NOT A TOY, ADULT SUPERVISION IS RECOMMENDED.

1. Read these instructions.
2. Keep these instructions.
3. Follow all instructions.
4. Heed all warnings.
5. Do not use this product on your knees for more than 30 minutes with at least 5 minutes break.
6. Do not use this device near water.
7. Clean only with a dry cloth.
8. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
9. To prevent overheating, when the device is plugged in or turned on, do not leave inside an unventilated location, such as a bag.
10. Do not install near any heat sources such as electric baseboard heater, cookers or others (including amplifiers).
11. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarised plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the provided plug does not fit into your wall outlet, ask an adult to consult an electrician for replacement of the obsolete outlet.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
13. Only use attachments/ accessories specified by the manufacturer.
14. Unplug this device during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the following: the power supply cord or the plug has been damaged; liquid has been spilled or objects have fallen into the device; the device has been exposed to rain or moisture, or has been dropped.
16. Do not overload outlets. Only use power source as indicated.
17. Use replacement parts as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Keep the device away from all metal objects (coins, keys, etc.). Do not place near magnetic fields that could cause data loss or damage the device.
20. Do not allow the device to fall. Do not expose it to bumps, rubbing and impacts. When transporting the device, place it in a protective cover.
21. Protect the device from moisture and rain. If it is wet, dry it immediately.
22. Do not touch the power cord when your hands are wet and do not pull on the

LBOX100ENIM1364_5Sept_V05.indd 57 05/09/2014 4:54 PM

charger to unplug it.
23. To prevent data loss, remember to make a backup (either electronic or paper format) of the information recorded in the device.
24. To prevent interference, do not use the device next to other electronic devices, pacemakers or near medical equipment.
25. Switch off the device in locations where there are explosion risks and when travelling by plane.
26. Do not use the device near flammable sources or explosives.
27. Do not expose the device to direct sunlight or to any other extreme source of heat or cold.
28. Do not attempt to disassemble the device, as this will void the warranty.
29. Do not place sharp objects directly in contact with the surface and do not spray any cleaning product directly onto the screen.
30. Do not press hard on the screen and do not place objects on top of it as doing so could damage the screen.
31. The power socket must be installed near the equipment and must be easily accessible.

32. Access to the AC adaptor must not be impeded OR the AC adaptor must remain easy to access during the entire intended length of use.

33. To completely unplug the device from the power supply, the AC adaptor must be removed from the DC jack, since the AC adaptor is used as a disconnection mechanism.

34. The device and the AC adaptor must not be exposed to drops or splashes, and no objects filled with liquid, for example a vase, must be placed near them.

LBOX100ENIM1364_5Sept_V05.indd 58 05/09/2014 4:54 PM

Epilepsy Warning

Please read before using any video game!

Some people are susceptible to epileptic seizures or loss of consciousness when exposed to certain flashing lights or recurring elements in everyday life. Such people may have a seizure while watching certain televised images or playing certain video games. This may occur even if the person has no previous medical history of epilepsy or has never had any epileptic seizures. If you or anyone in your family has ever had symptoms related to epilepsy (seizures or loss of consciousness) when exposed to luminous stimulation, consult your doctor prior to playing video games. We advise that parents should monitor the use of video games by their children. If you or your child experience any of the following symptoms: dizziness, blurred vision, eye or muscle twitches, loss of consciousness, disorientation, any involuntary movement or convulsion, while playing a video game, immediately discontinue use and seek medical attention.

Precautions to Take During Use of Video Games:

- Do not stand too close to the screen.
- It is preferable to play video games on a small screen.
- Avoid playing if you are tired or have not had enough sleep.
- Ensure that the room in which you are playing is well lit.
- Rest for at least 10 to 15 minutes per hour while playing a video game.

WARNING: Prolonged use of the tablet may harm the user's health.

Maintenance and Warranty

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning. Clean the device by wiping it with a dust cloth, as with other furniture, avoiding the use of any detergent product. Use caution when cleaning and wiping the screen.

This product is covered by our one-year warranty. For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the user's manual or from any careless action applied to this item (such as dismantling, exposure to heat and humidity, etc.).

In a bid to keep improving our services, we reserve the right to implement modifications to the colours and the details of the product shown on the packaging.

Note: Please keep this user's manual as it contains important information. The content of this user's manual may change without notice. No part of this user's manual may be reproduced with the written consent of the manufacturer.

LBOX100ENIM1364_5Sept_V05.indd 59 05/09/2014 4:54 PM

Reference: LBOX100EN

Designed and developed in Europe – Manufactured in China

© LEXIBOOK®

Design registered

LEXIBOOK SA

2, avenue de Scandinavie

91953 Courtaboeuf Cedex

France

United Kingdom & Ireland

For any further information, please call Helpline: 0808 1003015

Environmental Protection

Unwanted electronic devices can be recycled and should not be discarded along with regular household waste! Please actively support the conversation of resources and help protect the environment by returning this device to a collection centre (if available).

Conformity Declaration

We, Lexibook® S.A.

2, avenue de Scandinavie
91953 Courtaboeuf Cedex – France

Declare under our sole responsibility that the product:

Designation: LexiBox®
Reference / type: LBOX100EN

Is in compliance with the following standards:

EN 55022: 2010
EN 61000-3-2: 2006 +A1:2009+A2:2009
EN 61000-3-3: 2013
EN 55024: 2010
EN 300 328 V1.8.1
EN 301 489-1 V1.9.2
EN 301 489-17 V2.2.1
EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011+A2:2013

LBOX100ENIM1364_5Sept_V05.indd 60 05/09/2014 4:54 PM

EN62479:2010

We hereby declare that the abovementioned product is in compliance with European Union directives, specifically with the EMC Directive (2004/108/EC) and with the Low Voltage Directive (2006/95/EC) and with the R&TTE Directive (1999/5/EC).

Yiu Wai Man
Product Research and Development Manager
Hong Kong, 08/08/2014

CE 0890

IM code: LBOX100ENIM1364

LBOX100ENIM1364_5Sept_V05.indd 61 05/09/2014 4:54 PM

LBOX100ENIM1364_5Sept_V05.indd 62 05/09/2014 4:54 PM

LBOX100ENIM1364_5Sept_V05.indd 63

YOUR OPINION MATTERS / VOTRE AVIS COMPTE

Help us make products better than ever! Please fill out the following form in English or in French, and return it to the following address / Aidez-nous à rendre nos produits encore meilleurs! Merci de bien vouloir remplir ce coupon en français ou en anglais et de nous le retourner à l'adresse suivante

LEXIBOOK S.A,
Mon avis compte
2, avenue de Scandinavie,
91953 Courtaboeuf Cedex
FRANCE

Reference of product / Référence du produit : LBOX100EN

Name of product / Nom du produit : _____

Date of purchase / Date de l'achat : ____/_____/_____

Store / Enseigne : _____

Birth Date of the user / Date de naissance de l'utilisateur de ce produit : ____/_____/_____

First name/Prénom : _____ *Last name*/Nom de famille : _____

Address/Adresse : _____

Zip code/Code Postal : _____ *Country*/Pays : _____ *City*/Ville : _____

Phone/Téléphone : _____ Email : _____

***What is your overall impression of the product?* / Vous trouvez le produit globalement :**

Very satisfactory/Très satisfaisant ☐ *Satisfactory*/Satisfaisant ☐ *Average*/Moyen ☐

Disappointing/Décevant ☐ *Very disappointing*/Très décevant ☐

***Please feel free to leave your comments here* / Vous pouvez à présent utiliser l'espace suivant pour nous donner vos remarques :**

_____

_____

_____

_____

Find all our new products on / Retrouvez toute notre actualité sur: **http://www.lexibook.com**

Conformément aux articles 34 et suivants de la loi « Informatique et Libertés » du 6 janvier 1978, vous disposez d'un droit d'accès, de modification, de rectification et de suppression des données qui vous concernent. Vous pouvez l'exercer sur simple demande à notre adresse. Si vous ne souhaitez pas que ces données soient utilisées à des fins de prospection commerciale, veuillez cocher ici : ☐

05/09/2014 4:54 PM

Affranchir
ici

LEXIBOOK S.A
Mon avis compte
2, avenue de Scandinavie
91953 Courtaboeuf Cedex
FRANCE

05/09/2014 4:54 PM
LBOX100ENIM1364_5Sept_V05.indd 64